






INNO^{PAD} IN-WALL-SYSTEMLÖSUNG FÜR DAS IPAD 2TM* UND „DAS NEUE“ IPADTM*

INNO^{PAD} IN-WALL-SYSTEM SOLUTIONS
FOR IPAD 2TM* AND „THE NEW“ IPADTM*

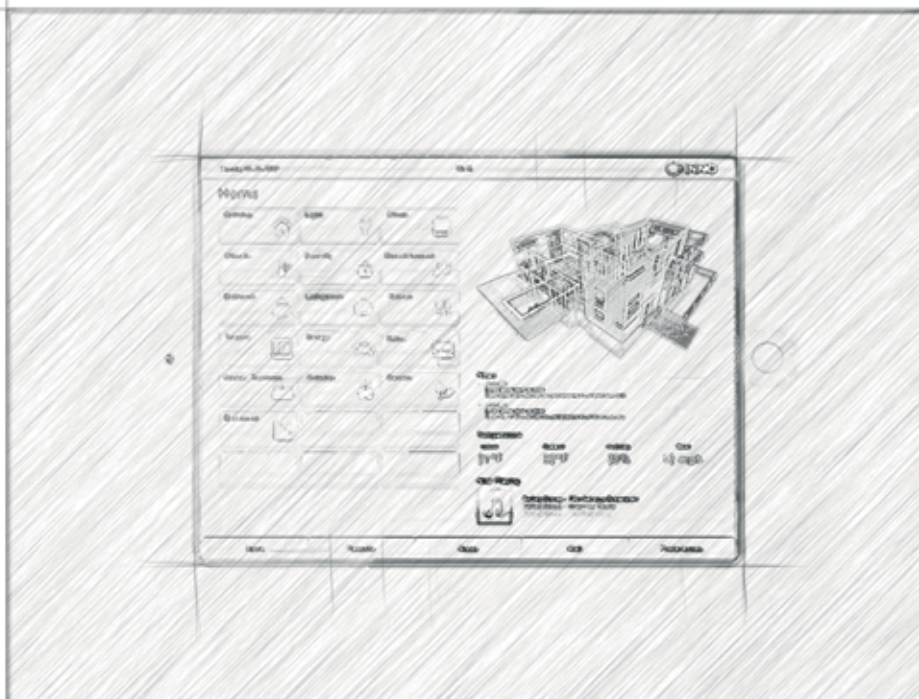

ZERTIFIZIERUNG NACH

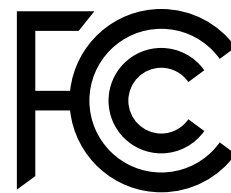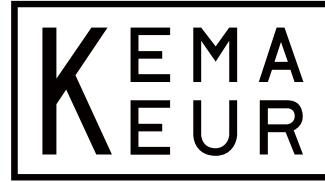

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- >> Reorient or relocate the receiving antenna
- >> Increase the separation between the equipment and the receiver
- >> Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- >> Consult the dealer or an experienced radio/TV technician for help

INHALT

Bitte lesen Sie vor der Montage und Inbetriebnahme des INNO^{PAD} die Bedienungsanleitung und beachten Sie unbedingt die Empfehlungen und Anweisungen.

1 SICHERHEITSHINWEISE	04
2 EINLEITUNG	04
3 LIEFERUMFANG	05
4 WICHTIGE BAUTEILE	06
5 INSTALLATIONSVORBEREITUNG	08
6 INSTALLATION DES INNO ^{PAD}	09
6.1 INSTALLATION IN EINE MASSIVWAND	09
6.2 INSTALLATION IN EINE HOHLWAND	12
7 GEWÄHRLEISTUNG	14

1 SICHERHEITSHINWEISE

Bitte befolgen Sie diese Sicherheitshinweise genau, um Gefahren und Schäden für Menschen und Sachwerte auszuschließen.

- » Befolgen Sie die Anweisungen und Empfehlungen in der Bedienungsanleitung.
- » Alle elektrischen Installationsarbeiten sind von einem ausgebildeten Elektriker unter Einhaltung der allgemeinen Vorschriften für elektrische Anschlüsse durchzuführen.
- » Stellen Sie vor der Installation des INNO^{PAD} sicher, dass am Installationsort alle stromführenden Kabel von der Spannungsversorgung getrennt sind!
- » Das INNO^{PAD} ist für den Betrieb in folgenden Spannungsbereichen ausgelegt: 100 – 240 V AC; 50/60 Hz., 0,2 A. Wichtig: abgesichert durch 16 A Haussicherung!
- » Am Installationsort sollte direkte Sonneneinstrahlung vermieden und Temperaturen von 0 – 35 °C sowie eine relative Luftfeuchtigkeit von 10 – 95 % (nicht kondensierend) nicht unter- oder überschritten werden.
- » Schützen Sie das INNO^{PAD} vor Nässe und Flüssigkeiten, um Beschädigungen zu verhindern.
- » Bei Beschädigung des INNO^{PAD} durch äußere Krafteinwirkung oder Kontakt mit Flüssigkeiten das Gerät sofort mit der vorgeschalteten Sicherung von der Spannungsversorgung trennen.
- » Zur Säuberung des INNO^{PAD} nur das mitgelieferte Reinigungstuch nutzen! Bitte verwenden Sie keine aggressiven Reinigungsmittel.
- » Verwenden Sie dieses Produkt nur für die vom Hersteller ausdrücklich vorgegebenen Apple* Geräte.
- » Bewahren Sie die Bedienungsanleitung zum späteren Gebrauch auf.
- » Der Hersteller haftet nicht für Schäden oder Verletzungen, die durch falsche Montage oder unsachgemäße Verwendung verursacht werden.
- » Dieses Produkt enthält kleine Teile, die beim Verschlucken zum Erstickungstod führen können. Lassen Sie die Teile nicht unbeaufsichtigt in der Nähe von Kindern liegen!

2 EINLEITUNG

INNO bietet für alle gängigen WLAN-basierten Haustechniksteuerungen die idealen IN-WALL-SYSTEMLÖSUNGEN für das iPad™*. Als Teil einer kompletten Steuerungslösung bieten die iPads™* eine Vielzahl praktischer und bedienerfreundlicher Applikationen, zum Beispiel als Alternative zu bestehenden KNX-Schalterprogrammen.

INNO^{PAD} steht für hochwertige IN-WALL-SYSTEMLÖSUNGEN aus edelsten Materialien, die sich den verbauten Designideen ihrer Umgebung ohne Einschränkung anpassen. Mit äußerst aufwendigen Verfahren verarbeitet INNO zum Beispiel kostbare Edelhölzer, Blattgold, wertvolle Steine sowie hochwertigste Carbonfasern und Lacke zu Systemlösungen, die auf anspruchsvollste Art Funktionalität mit Luxusdesign vereinen.

Um die Dekore einerseits dauerhaft zu schützen und andererseits die Brillanz der Optik zu unterstreichen, werden sie durch ein Sandwichverfahren aus speziell gehärtetem Glas geschützt. Ein besonderes Designelement ist der beleuchtete Bedien-Button, der auch in der Dunkelheit Orientierung gibt.

Mit INNO^{PAD} wird jedes iPad™* zum integrierten, kundenspezifischen Design-Touchpad-Controller für moderne Multiroom-Systeme, private und gewerbliche Medientechnik, Home-Entertainment und die Steuerung intelligenter Gebäudetechnik.

*Trademark notice: Apple and iPad™ are trademarks of Apple Inc., registered in the U.S. and other countries.

3 LIEFERUMFANG

Bitte prüfen Sie den Inhalt der Verpackung auf Vollständigkeit, bevor Sie mit der Montage beginnen. Die gelieferte Verpackung enthält folgende Bauteile:


Anzahl Bezeichnung

1	Installationsdose mit Netzteilplatine und vormontierten Hohlwandspreizen
1	Connectionboard
1	Metallträger
2	Distanzbleche für die iPad 2™* Installation
2	Magnetklebefolie
1	Glasdekorrahmen mit integriertem Home-Button und 6 Haltemagneten
5	Arretierungsschrauben M3 x 8 DIN 7500 Form C (für Metallträger)
3	Gewindeschrauben M3 x 8 DIN 7985 / ISO 7045 (zur Befestigung der Installationsdose an der Unterputzeinbaudose)
1	Zugentlastungsbügel (vormontiert)
1	Erdungskabel
1	Einbauschablone für den Hohlwandeinbau
1	Paar Montagehandschuhe
1	INNO Reinigungstuch

Bitte beachten Sie: Für den Einbau in festes Mauerwerk ist eine speziell zur Aufnahme der Installationsdose gefertigte Unterputzeinbaudose optional erhältlich.

4 WICHTIGE BAUTEILE

4.1 INSTALLATIONSDOSE

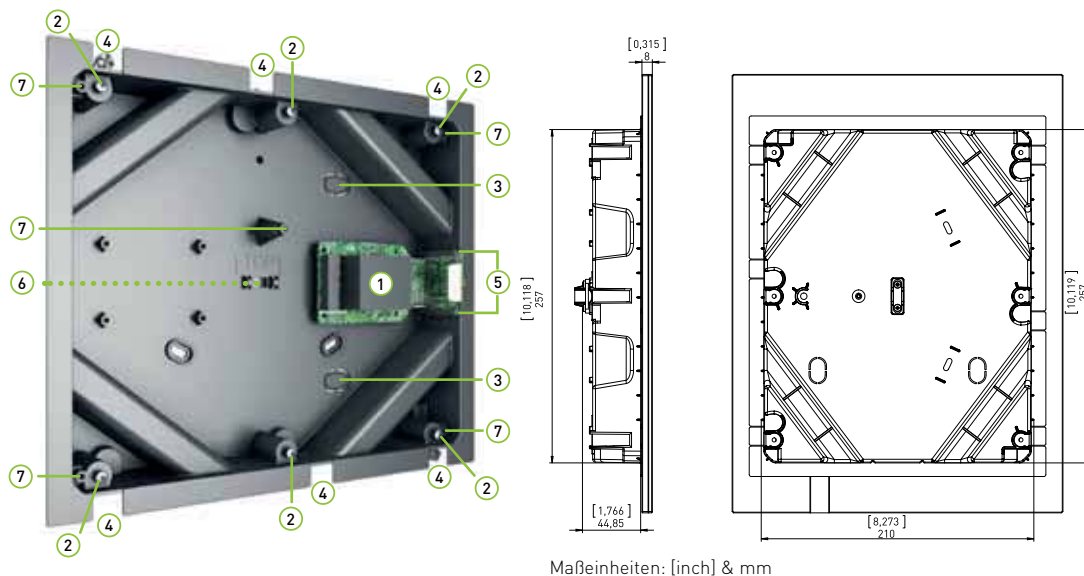

- ① Netzteilplatine
- ② Befestigungsschrauben mit Hohlwandspreizen
- ③ Ausbrechbare Kabeldurchführung
- ④ Aussparungen zur Aufnahme des Metallträgers
- ⑤ Führungsschiene Connectionboard
- ⑥ Zugentlastung (Rückseite)
- ⑦ Aufnahme Arretierungsschrauben


BESONDERE MERKMALE

- >> Mit Führungsvorrichtung zur Aufnahme der Unterputzdose (Pendelfunktion)
- >> Auch für Hohlwandinstallationen ausgelegt
- >> 6 Metallspreizen bieten sicheren Halt in jeder Hohlwand
- >> Kabeldurchführungen und Zugentlastung für alle Kabeltypen
- >> Polyamid 6 brandgeschützt (Pa 6 V0)

NETZTEIL / SPANNUNGSVERSORGUNG

- >> Multinational einsetzbar
- >> Kein externes Netzteil notwendig, dadurch einfache Nachrüstbarkeit im Bestandsbau
- >> Input AC: 100 – 240 V, 0,2 A
- >> Frequenz: 50 / 60 Hz
- >> Output DC: 5 VDC (+)

4.2 METALLTRÄGER

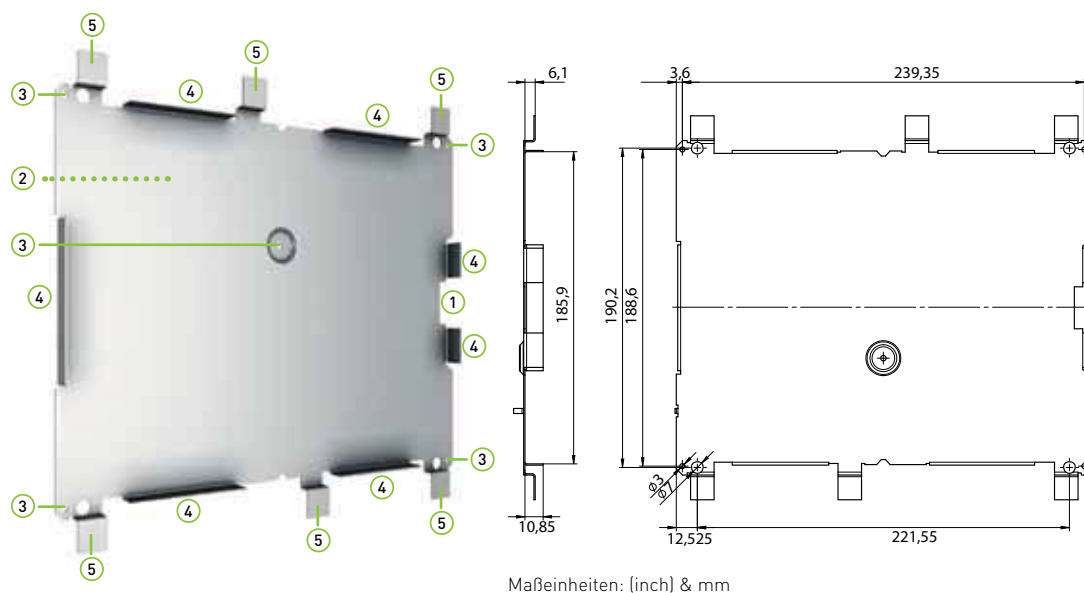


- ① Aussparung für Einschub Connectionboard
- ② Anschluss Erdungskabel (Rückseite)
- ③ Aufnahme Arretierungsschrauben
- ④ Zentrierung für Glasdekorrahmen
- ⑤ Haftflächen für Magnethalterung

BESONDERE MERKMALE

- >> Magnetische Aufnahmefunktion des iPad™*
- >> Ausführung in Edelstahl
- >> Seitliche Aufnahmeflächen zur Zentrierung und Fixierung des Glasdekorrahmens

*Trademark notice: iPad™ is a trademark of Apple Inc., registered in the U.S. and other countries.

4.3 GLASDEKORRAHMEN

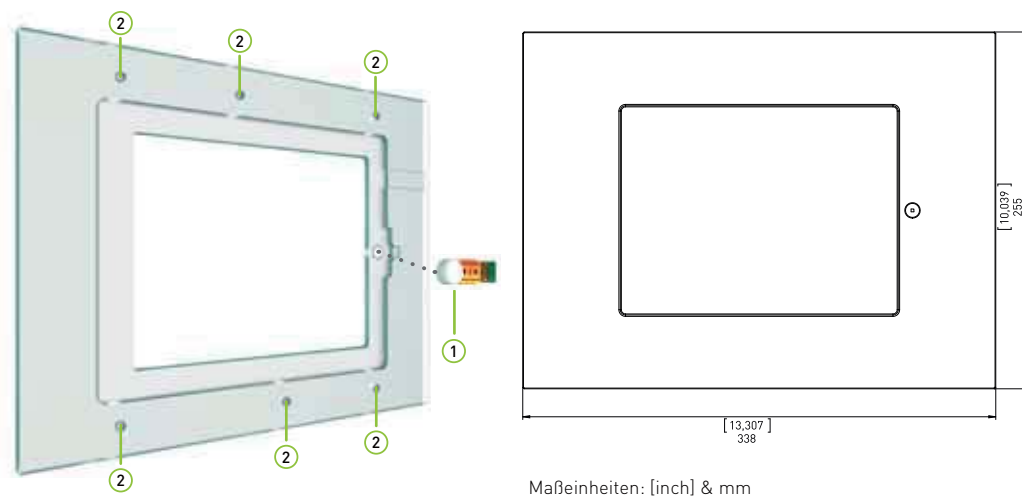


- ① Bedien-Button
- ② Integrierte Magnete

BESONDERE MERKMALE

- » Einzigartiger beleuchteter Bedien-Button
- » Kabellose Kontaktierung, einfache Installation
- » Integrierte Magnete zur Fixierung an Metallträger

4.4 UNTERPUTZEINBAUDOSE (OPTIONAL)

Nicht im Lieferumfang enthalten. Bei Bedarf unter der Art.-Nr.: INN PAD-UP-99-99-02-00.

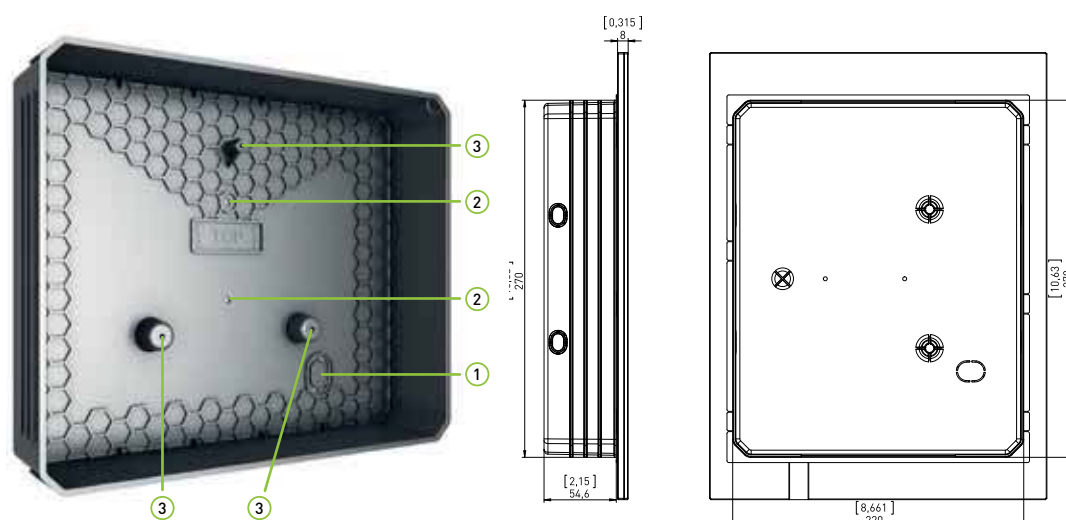

- ① Ausbrechbare Kabeldurchführung
- ② Fixierungslöcher
- ③ Arretierung für Installationsdose

BESONDERE MERKMALE

- » Speziell gefertigte Einbaudose für den Massivwandeinbau
- » Mit seitlichen Rillen für den sicheren Halt im eingeputzten Zustand
- » Die Unterputzdose bietet eine Pendelaufnahme für die Installationsdose, um die perfekte Ausrichtung zu gewährleisten
- » Kabeldurchführungen von allen Seiten
- » Polyamid 6 brandgeschützt (Pa 6 V0)

5 INSTALLATIONSVORBEREITUNG

5.1 WAHL DES INSTALLATIONSORTES

Für eine reibungslose Montage des INNO^{PAD} und den problemlosen Betrieb des eingesetzten iPadTM* sind bei der Auswahl des Installationsortes folgende Faktoren zu beachten:

- >> Es muss ein ausreichend starkes WiFi-Signal für den störungsfreien Betrieb des iPadTM* vorliegen.
- >> Der Installationsort muss eine Bautiefe von mindestens 56 mm für den Unterputzeinbau und mindestens 45 mm für den Hohlwandeinbau ermöglichen.
Tipp: Nutzen Sie für die Montage in einer Massivwand die speziell gefertigte Unterputzeinbaudose für das INNO^{PAD}. Sie ist nicht im Lieferumfang enthalten und kann gesondert bestellt werden (Art.-Nr.: INN PAD-UP-99-99-02-00).
- >> Am Installationsort sollte direkte Sonneneinstrahlung vermieden und Temperaturen von 0 – 35 °C sowie eine relative Luftfeuchtigkeit von 10 – 95 % (nicht kondensierend) nicht unter- oder überschritten werden.
- >> Am Installationsort muss für eine ausreichende Spannungsversorgung (gemäß Angaben) gesorgt werden.
- >> Für den Unterputzeinbau sollte der Installationsort in der Wand frei von Kabeln, Versorgungsleitungen oder Stützträgern sein.
- >> Die Installationshöhe sollte eine einfache Bedienung des iPadTM* für alle Nutzer ermöglichen.

Bitte beachten Sie: Alle elektrischen Verbindungen und Installationsarbeiten müssen von ausgebildeten Elektrikern unter Einhaltung der allgemeinen Regeln und Vorschriften für elektrische Anschlüsse ausgeführt werden.

5.2 AUSPACKEN DER BAUTEILE

Die kompakte Verpackung des INNO^{PAD} schützt die Einzelteile vor Beschädigung und Verschmutzung. Für den optimalen Schutz der hochwertigen Bauteile mit empfindlichen Oberflächen wurde die Umverpackung so konzipiert, dass die einzelnen Teile in der Reihenfolge ihrer Montage nacheinander aus den schützenden Fächern herausgenommen werden können.

Bitte beachten Sie, vor Entnahme der Bauteile die Transportsicherung zu entfernen (gekennzeichnet durch den Aufkleber auf dem Metallträger).

Um Beschädigungen zu vermeiden, behandeln Sie bitte jedes Teil mit Vorsicht und nutzen Sie zur Installation die mitgelieferten Montagehandschuhe.

*Trademark notice: iPadTM is a trademark of Apple Inc., registered in the U.S. and other countries.

6 INSTALLATION DES INNO^{PAD}

6.1 INSTALLATION IN EINE MASSIVWAND



Abbildung 1



Abbildung 2



Abbildung 3

6.1.1 INSTALLATION DER UNTERPUTZEINBAUDOSE

Für einen passgenauen Einbau des INNO^{PAD} in eine Massivwand empfehlen wir die Verwendung der INNO Unterputzeinbaudose (UP-Dose). Sie ist speziell für die Aufnahme der INNO^{PAD} Installationsdose ausgelegt und garantiert einen exakten und sicheren Sitz der kompletten INNO IN-WALL-SYSTEMLÖSUNG.

Die UP-Dose ist nicht im Lieferumfang enthalten und kann optional bestellt werden (Art.-Nr. INN PAD-UP-99-99-02-00).

1. Entnehmen Sie die Einbauschablone für den Unterputzeinbau aus der Verpackung und richten Sie diese waagrecht am Installationsort aus.
2. Befestigen Sie die Schablone mit einem Klebeband an der Wand und zeichnen Sie die inneren Umrisse der Vorlage mit einem Stift nach (Abb. 1).
3. Nehmen Sie die Schablone von der Wand ab und **stellen Sie sicher, dass am gewünschten Installationsort die Wand frei von Versorgungsleitungen oder Metallträgern ist.**
4. Entfernen Sie im markierten Wandbereich vorsichtig den Ausbruch für die Aufnahme der UP-Dose.
5. Entnehmen Sie die UP-Dose aus der Verpackung.
6. Halten Sie die UP-Dose unter Beachtung des im Dosenboden befindlichen Ausrichtungshinweises „TOP“ an die Wandöffnung und bestimmen Sie die optimale Position für die Durchführung des Stromkabels in die UP-Dose (Abb. 2).
7. **Stellen Sie sicher, dass am Installationsort alle stromführenden Kabel von der Spannungsversorgung getrennt sind!** Öffnen Sie an passender Stelle die ausbrechbare Kabeldurchführung und ziehen Sie das Stromkabel und ggf. benötigte Audiokabel durch die Kabeldurchführung in die UP-Dose ein. Achten Sie darauf, die Kabel nicht zu beschädigen.
8. Setzen Sie die UP-Dose lotrecht mit der „TOP“-Markierung nach oben in die Wandöffnung ein und fixieren Sie die UP-Dose in der Wand (Abb. 3). **Tipp:** Nutzen Sie zur Befestigung die Fixierungslöcher im Boden der UP-Dose.
9. Zur endgültigen Arretierung der UP-Dose muss sie bündig eingegipst werden. Verputzen Sie die Kanten der UP-Dose flächig zur Wand.

6.1 INSTALLATION IN EINE MASSIVWAND



Abbildung 4

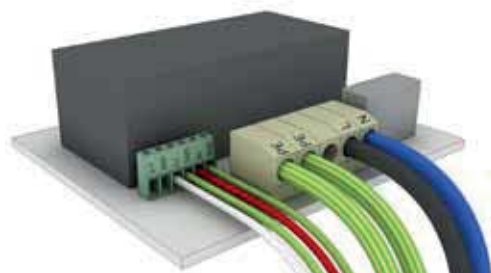


Abbildung 5



Abbildung 6



Abbildung 7



Abbildung 8

6.1.2 EINBAU DER INSTALLATIONSDOSE

1. Entnehmen Sie nach Entfernung der Transportsicherung die Installationsdose aus der Verpackung.
2. Halten Sie die Installationsdose unter Beachtung des im Dosenboden befindlichen Ausrichtungshinweises „TOP“ an die UP-Dose an und öffnen Sie die Kabeldurchführung.
3. **Stellen Sie sicher, dass am Installationsort alle stromführenden Kabel von der Spannungsversorgung getrennt sind!** Ziehen Sie das Stromkabel und ein ggf. benötigtes Audiokabel durch die Kabeldurchführung in die Installationsdose ein. Achten Sie darauf, die Kabel nicht zu beschädigen.
4. Sichern Sie das Stromkabel mit der Zugentlastung auf der Rückseite der Installationsdose (Abb. 4). **Tipp:** Durch Umdrehen des Zugentlastungsbügels kann die Zugentlastung auf unterschiedliche Kabelstärken abgestimmt werden.
5. **Alle elektrischen Installationsarbeiten sind von ausgebildeten Elektrikern fachgerecht durchzuführen.** Kürzen Sie das Stromkabel auf eine Länge von 250 mm ab Zugentlastung und befestigen Sie es unter Berücksichtigung der Anschlussbeschriftung am vormontierten Netzteil (Abb. 5).
6. **Alle elektrischen Installationsarbeiten sind von ausgebildeten Elektrikern fachgerecht durchzuführen.** Für eine Tonausgabe über Chinchkabel (NF) befestigen Sie das Audiokabel am Audioausgang der Hauptplatine (Abb. 5).
7. Setzen Sie die Installationsdose mit der „TOP“-Markierung nach oben in die UP-Dose ein und fixieren Sie diese mit Hilfe der Gewindeschrauben an der UP-Dose.
8. Richten Sie mit Hilfe der Pendelaufnahme die Installationsdose lotrecht aus und sichern Sie die Position durch Festziehen der Gewindeschrauben (Abb. 6).

6.1.3 INSTALLATION DES METALLTRÄGERS

1. Entnehmen Sie den Metallträger aus der Verpackung.
2. **Stellen Sie sicher, dass am Installationsort alle stromführenden Kabel von der Spannungsversorgung getrennt sind!** **Alle elektrischen Installationsarbeiten sind von ausgebildeten Elektrikern fachgerecht durchzuführen.** Zur Erdung des Metallträgers befestigen Sie das Erdungskabel an dem dafür vorgesehenen Anschluss auf der Rückseite des Metallträgers.
3. Setzen Sie den Metallträger passend in die Aussparung der Installationsdose ein und fixieren Sie ihn mit der mittleren Arretierungsschraube an den vorgesehenen Aufnahmen (Abb. 7).
4. Falls Sie ein iPad 2™* nutzen, setzen Sie – für einen perfekten Sitz unter dem Glasdekorrahmen – die mitgelieferten 2 Distanzbleche in den Boden des Metallträgers ein (Abb. 8).
5. Befestigen Sie den Metallträger – bei iPad 2™* Nutzung inklusive Distanzbleche – mit den restlichen Arretierungsschrauben an der Installationsdose.

*Trademark notice: iPad™ is a trademark of Apple Inc., registered in the U.S. and other countries.



Abbildung 9



Abbildung 10

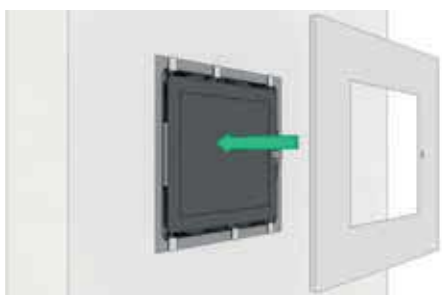


Abbildung 11



Abbildung 12

6.1.4 BEFESTIGUNG DES IPAD™/** AUF DEM METALLTRÄGER

Bitte benutzen Sie bei der Installation des INNO^{PAD} die mitgelieferten Handschuhe.

1. Entnehmen Sie die Magnetklebefolien und das Connectionboard aus der Verpackung.
2. Lösen Sie die Schutzfolie von der Klebefläche der Magnetklebefolien und befestigen Sie sie auf der Rückseite des iPad™* (Abb. 9). **Achtung: Bei Nutzung des iPad 2™* positionieren Sie bitte die Magnetklebefolien so, dass sie auf den Distanzblechen am Metallträger haften.**
3. Stecken Sie das Connectionboard mit der Platine nach hinten zeigend in den iPad™* Dockanschluss (Abb. 9).
4. Schieben Sie das iPad™* vorsichtig mit der Platine des Connectionboards voraus bündig in die Führungsschiene der Installationsdose, so dass die Magnetklebefolien auf der Rückseite des iPad™* auf dem Metallträger haften (Abb. 10).
5. Säubern Sie das iPad™* Display mit dem beigegeführten INNO Reinigungstuch.

6.1.5 INSTALLATION DES GLASDEKORRAHMENS

Vorsicht bei der Handhabung des wertvollen Glasdekorrahmens. Um eine Körper- und Sachbeschädigung zu verhindern, den Glasrahmen bei der Installation nicht fallen lassen.

1. Entnehmen Sie den Glasdekorrahmen vorsichtig aus der Verpackung. **Bitte benutzen Sie zum Schutz der hochwertigen Oberflächen bei der Installation die mitgelieferten Handschuhe.**
2. Positionieren Sie den Glasdekorrahmen, mit dem INNO Logo im unteren Rahmenbereich lesbar, genau vor den Metallträger (Abb. 11).
3. Setzen Sie den Glasdekorrahmen entlang der Zentrierhilfe vorsichtig auf den Metallträger, bis die Magneten auf der Rückseite des Rahmens fest auf dem Träger haften (Abb. 12).

6.1.6 INBETRIEBNAHME

1. Schalten Sie die Spannungsversorgung ein.
2. Der Home-Button leuchtet, das iPad™* wird geladen und ist betriebsbereit.
3. Schalten Sie das iPad™* ein und nehmen Sie die gewünschten Einstellungen vor.

Bei Fragen zur Bedienung des iPad™* und der installierten Apps nutzen Sie bitte die Handbücher der Hersteller.

*Trademark notice: iPad™ is a trademark of Apple Inc., registered in the U.S. and other countries.

**Nicht im Lieferumfang enthalten.

6.2 INSTALLATION IN EINE HOHLWAND



Abbildung 13

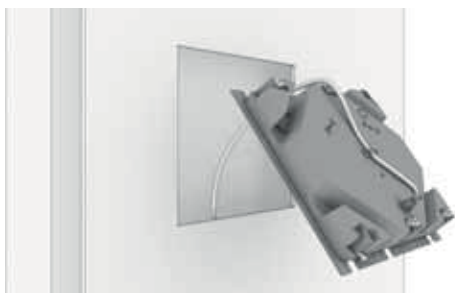


Abbildung 14

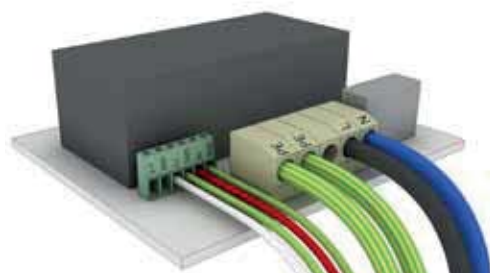


Abbildung 15

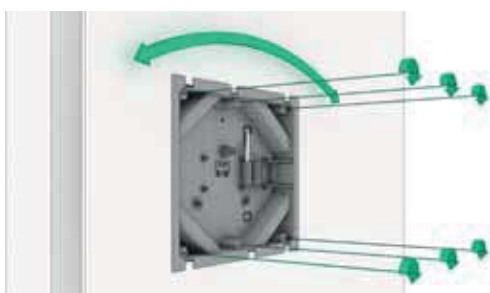


Abbildung 16



Abbildung 17

6.2.1 EINBAU DER INSTALLATIONSDOSE

1. Entnehmen Sie die Einbauschablone für den Hohlwand-einbau aus der Verpackung, richten Sie diese am Installationsort waagrecht aus und zeichnen Sie die inneren Umrisse der Schablone mit einem Stift nach (Abb. 13).
2. **Stellen Sie sicher, dass am Installationsort die Wand frei von Versorgungsleitungen oder Metallträgern ist.** Entfernen Sie im markierten Bereich vorsichtig den Ausschnitt für die Aufnahme der Installationsdose.
3. Entnehmen Sie nach Entfernung der Transportsicherung die Installationsdose aus der Verpackung.
4. Halten Sie die Installationsdose unter Beachtung des im Dosenboden befindlichen Ausrichtungshinweises „TOP“ an die Wandöffnung und öffnen Sie die Kabeldurchführung.
5. **Stellen Sie sicher, dass am Installationsort alle stromführenden Kabel von der Spannungsversorgung getrennt sind!** Ziehen Sie das Stromkabel und ein ggf. benötigtes Audio-kabel durch die Kabeldurchführung in die Installationsdose ein. Achten Sie darauf, die Kabel nicht zu beschädigen.
6. Sichern Sie das Stromkabel mit der Zugentlastung auf der Rückseite der Installationsdose. **Tipp:** Durch Umdrehen des Zugentlastungsbügels kann die Zugentlastung auf unterschiedliche Kabelstärken abgestimmt werden (Abb. 14).
7. **Alle elektrischen Installationsarbeiten sind von ausgebildeten Elektrikern fachgerecht durchzuführen.** Kürzen Sie das Kabel auf eine Länge von 250 mm ab Zugentlastung und befestigen Sie es unter Berücksichtigung der Anschluss-beschriftung am vormontierten Netzteil (Abb. 15).
8. Für eine Tonausgabe über Chinchkabel (NF) befestigen Sie das Audiokabel am Audioausgang der Hauptplatine (Abb. 15).
9. Setzen Sie die Installationsdose mit der „TOP“-Markierung nach oben in die Wandöffnung und fixieren Sie sie lotrecht durch Schrauben der Metallspreizen bis zum Auftreten eines Widerstandes (Abb. 16). Die Spreizen klappen automatisch beim Schrauben aus, kontern von innen gegen die Hohlraumwand und befestigen so die Installationsdose.

6.2.2 INSTALLATION DES METALLTRÄGERS

1. Entnehmen Sie den Metallträger aus der Verpackung.
2. **Stellen Sie sicher, dass am Installationsort alle stromführenden Kabel von der Spannungsversorgung getrennt sind! Alle elektrischen Installationsarbeiten sind von ausgebildeten Elektrikern fachgerecht durchzuführen.** Zur Erdung des Metallträgers befestigen Sie das Erdungs-kabel an dem dafür vorgesehenen Anschluss auf der Rück-seite des Metallträgers.
3. Setzen Sie den Metallträger passend in die Aussparung der Installationsdose ein und fixieren Sie ihn mit der mittleren Arretierungsschraube an den vorgesehenen Aufnahmen (Abb. 17).



Abbildung 18



Abbildung 19



Abbildung 20



Abbildung 21



Abbildung 22

4. Falls Sie ein iPad 2™* nutzen, setzen Sie – für einen perfekten Sitz unter dem Glasdekorrahmen – die mitgelieferten 2 Distanzbleche in den Boden des Metallträgers ein (Abb. 18).
5. Befestigen Sie den Metallträger – bei iPad 2™* Nutzung inklusive Distanzblechen – mit den restlichen Arretierschrauben an der Installationsdose.

6.2.3 BEFESTIGUNG DES IPAD™/** AUF DEM METALLTRÄGER

Bitte benutzen Sie bei der Installation des INNO^{PAD} die mitgelieferten Handschuhe.

1. Entnehmen Sie die Magnetklebefolien und das Connectionboard aus der Verpackung.
2. Lösen Sie die Schutzfolie von der Klebefläche der Magnetklebefolien und befestigen Sie sie auf der Rückseite des iPad™* (Abb. 19). **Achtung: Bei Nutzung des iPad 2™* positionieren Sie bitte die Magnetklebefolien so, dass sie auf den Distanzblechen am Metallträger haften.**
3. Stecken Sie das Connectionboard mit der Platine nach hinten zeigend in den iPad™* Dockanschluss (Abb. 19).
4. Schieben Sie das iPad™* vorsichtig mit der Platine des Connectionboards voraus bündig in die Führungsschiene der Installationsdose, so dass die Magnetklebefolien auf der Rückseite des iPad™* auf dem Metallträger haften (Abb. 20).
5. Säubern Sie das iPad™* Display mit dem beigefügten INNO Reinigungstuch.

6.2.4 INSTALLATION DES GLASDEKORRAHMENS

Vorsicht bei der Handhabung des wertvollen Glasdekorrahmens. Um eine Körper- und Sachbeschädigung zu verhindern, den Glasrahmen bei der Installation nicht fallen lassen.

1. Entnehmen Sie den Glasdekorrahmen vorsichtig aus der Verpackung. **Bitte benutzen Sie zum Schutz der hochwertigen Oberflächen die mitgelieferten Handschuhe.**
2. Positionieren Sie den Glasdekorrahmen, mit dem INNO Logo im unteren Rahmenbereich, vor den Metallträger (Abb. 21).
3. Setzen Sie den Glasdekorrahmen entlang der Zentrierhilfe vorsichtig auf den Metallträger, bis die Magneten auf der Rückseite des Rahmens fest auf dem Träger haften (Abb. 22).

6.2.5 INBETRIEBNAHME

1. Schalten Sie die Stromversorgung ein.
2. Der Home-Button leuchtet, das iPad™* wird geladen und ist betriebsbereit.
3. Schalten Sie das iPad™* ein und nehmen Sie die gewünschten Einstellungen vor.

Bei Fragen zur Bedienung des iPad™* und der installierten Apps nutzen Sie bitte die Handbücher der Hersteller.

*Trademark notice: iPad™ is a trademark of Apple Inc., registered in the U.S. and other countries.

**Nicht im Lieferumfang enthalten.

7 GEWÄHRLEISTUNG

GEWÄHRLEISTUNG

Ab Kaufdatum beträgt die Gewährleistungsfrist 2 Jahre. Ausnahme: Das INNO^{PAD} wurde im Rahmen der Gewährleistung repariert oder ersetzt. Die Gewährleistung gilt in diesem Fall bis zum Ende der ursprünglichen Gewährleistungsfrist oder 6 Monate ab Reparatur- bzw. Austauschdatum.

MANGELANSPRÜCHE / MANGELVALIDIERUNG

Bei Funktionsstörung Ihres INNO^{PAD} wenden Sie sich bitte mit Originalrechnung und Angabe der Seriennummer sowie der Fehlerbeschreibung an Ihren Händler. Nach einer vom Hersteller oder dessen autorisierten Kundendienstes vorgenommenen Funktionsprüfung wird festgestellt, ob der Defekt aufgrund von Material- oder Verarbeitungsmängeln innerhalb der Gewährleistungsfrist aufgetreten ist und somit ein Anspruch auf Reparatur oder Austausch Ihres INNO^{PAD} entstanden ist.

GEWÄHRLEISTUNGSAUSSCHLUSS

Die folgenden Schäden sind von der Gewährleistung ausgenommen. Schäden verursacht durch:

- >> Missbrauch sowie Nichteinhaltung der Bedienungsanleitung;
- >> unsachgemäßes Bedienen;
- >> Änderung des INNO^{PAD} über die in der Bedienungsanleitung beschriebenen Merkmale;
- >> Reparaturversuche oder Reparatur durch eine nicht autorisierte Person;
- >> Nutzung des INNO^{PAD} in Verbindung mit Fremdprodukten;
- >> Geräte, bei denen die Hersteller-Seriennummer gelöscht, entfernt, verändert oder unleserlich gemacht wurde;
- >> Anschluss an eine nicht geeignete Spannungsversorgung;
- >> höhere Gewalt.

HAFTUNGSBESCHRÄNKUNG

Die oben abgeführte Gewährleistung umfasst das volle Ausmaß der Haftung der INNO International GmbH. Daher lehnt die INNO International GmbH alle weiteren Haftungsansprüche für Verluste oder Schäden (mit Ausnahme nachgewiesener grober Fahrlässigkeit) aus dem Erwerb, Besitz, Verkauf oder Nutzung des INNO^{PAD} ab.

In keinem Fall ist die INNO International GmbH haftbar für Folgeschäden, Verzögerungen, unzutreffende Auskünfte oder Ratschläge und Verletzungen des Urheberrechts. Mängelbezogene Rechte des Käufers sind nicht betroffen.

VERSCHIEDENE BESTIMMUNGEN

Keine Person, eingeschlossen alle Vertriebspartner, Händler, Agenten oder Vertreter, ist berechtigt, im Namen der INNO International GmbH eine Gewährleistung zu übernehmen bzw. die Gewährleistungsansprüche abzuändern. Der Käufer muss eigenständig die Eignung des INNO^{PAD} für den geplanten Verwendungszweck bestimmen.


Offene Fragen beantwortet unsere **Hotline unter +49 (0) 180 501 501 3**
(14 Cent/Min. aus dem dt. Festnetz, max. 42 Cent/Min. aus Mobilfunknetzen.
Bei Anrufen aus dem Ausland können abhängig vom Netzbetreiber zusätzliche
Kosten anfallen.)





INNO International GmbH

Heinrich-Hertz-Straße 12
59423 Unna / Germany
Phone +49 (0) 2303 333-333
www.inno-international.com

INNO^{PAD} IN-WALL-SYSTEM SOLUTIONS FOR IPAD 2TM* AND „THE NEW“ IPADTM*

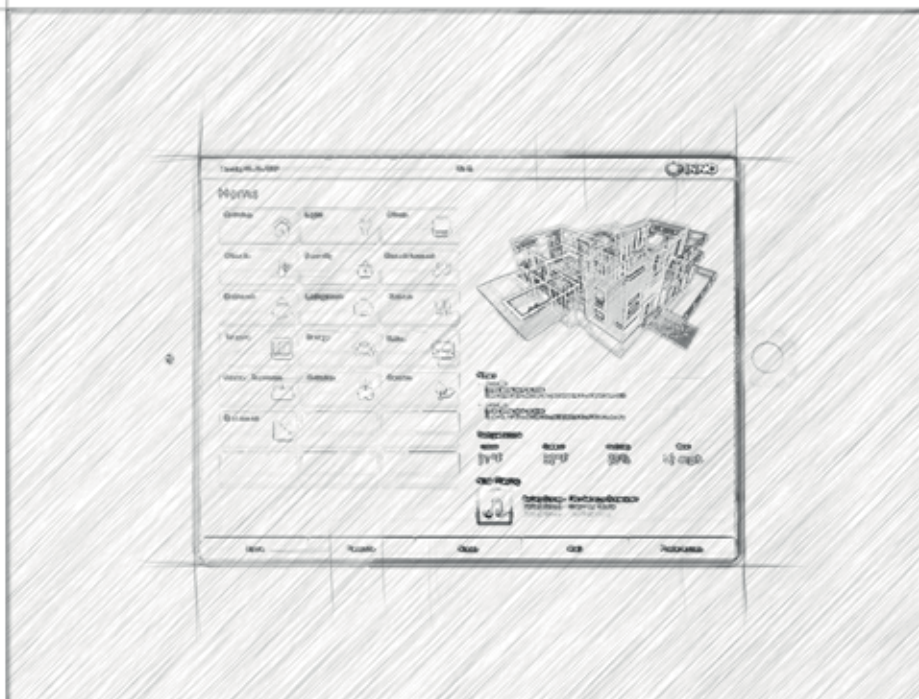

CERTIFIED PURSUANT TO

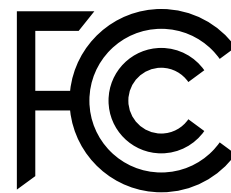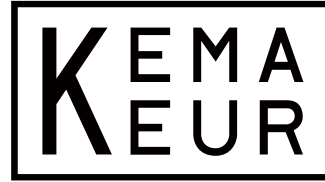

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- >> Reorient or relocate the receiving antenna
- >> Increase the separation between the equipment and the receiver
- >> Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- >> Consult the dealer or an experienced radio/TV technician for help

CONTENTS

Please read the operating manual before assembling and using the INNO^{PAD} and follow all recommendations and instructions.

EN

1	SAFETY NOTICES	18
2	INTRODUCTION	18
3	SCOPE OF DELIVERY	19
4	KEY COMPONENTS	20
5	PREPARING FOR INSTALLATION	22
6	INSTALLING THE INNO ^{PAD}	23
	6.1 SOLID WALL INSTALLATION	23
	6.2 CAVITY WALL INSTALLATION	26
7	WARRANTY	28

1 SAFETY NOTICES

Please follow these safety notices carefully to prevent hazards and danger to humans and property.

- » Follow all instructions and recommendations in the operating manual.
- » All electrical installation work must be carried out by a qualified electrician in compliance with the general regulations for electrical connections.
- » Ensure prior to installing the INNO^{PAD} that all live cables at the installation site are disconnected from the power supply!
- » The INNO^{PAD} is designed to be used with the following voltage: 100 – 240 V AC; 50/60 Hz, 0.2 A. Important: Use a 16 A household fuse!
- » The installation site should not be exposed to direct sunlight and maintain temperatures between 0 °C and 35 °C and a relative humidity between 10 % and 95 % (no condensation).
- » Protect the INNO^{PAD} from damp and liquids to prevent it from getting damaged.
- » If the INNO^{PAD} is damaged due to external force or contact with liquids, immediately disconnect the device from the power supply by using the fuse.
- » Use only the cleaning cloth delivered with the INNO^{PAD} to clean the device! Please do not use any aggressive detergents.
- » This product should only be used with the Apple* devices specifically stated by the manufacturer.
- » Keep the operating manual for later use.
- » The manufacturer does not assume liability for any damages or injuries caused by incorrect installation or inappropriate use.
- » This product contains small parts that may lead to death from suffocation if swallowed. Do not leave these parts unsupervised where children can reach them!

2 INTRODUCTION

INNO provides ideal iPad™* IN-WALL-SYSTEM SOLUTIONS for all common WLAN-based utility management systems. As part of an all-in-one management solution, iPads™* offer numerous practical and user-friendly applications, as an alternative to existing KNX switch ranges, for instance.

INNO^{PAD} stands for high-quality IN-WALL-SYSTEM SOLUTIONS made from sophisticated materials that adapt seamlessly to any existing interior designs. INNO's production processes are complex. Rare exotic woods, leaf gold, precious stones and state-of-the-art carbon fibres and lacquers are transformed into system solutions that combine the highest standard of functionality with luxury designs.

To permanently protect the decors and at the same time emphasise their glossy appearance, they are protected with a sandwich method that uses specially hardened glass. The illuminated operating button, which also offers a means of orientation in the dark, is one of the key design features.

INNO^{PAD} makes every iPad™* into an integrated customer-specific design touchpad controller for modern multi-room systems, private and commercial media technology, home entertainment and intelligent utility management.

*Trademark notice: Apple and iPad™ are trademarks of Apple Inc., registered in the U.S. and other countries.

3 SCOPE OF DELIVERY

Please check the content of the package to ensure that you have all parts before starting the installation. The package contains the following components:


No.	Description
1	Installation box with power supply board and pre-assembled cavity wall spreaders
1	Connection board
1	Metal base plate
2	Spacer plates for iPad 2™* installation
2	Magnetic adhesive foils
1	Decorative glass frame with integrated home button and 6 magnetic holders
5	M3 x 8 DIN 7500 form C stop screws (for metal base plate)
3	M3 x 8 DIN 7985 / ISO 7045 bolts (for fixing the installation box to the flush-mounting box)
1	Tension relief lever (pre-assembled)
1	Earth cable
1	Template for cavity wall installations
1	Pair of protective gloves
1	INNO cleaning cloth

Please note: A flush-mounting box specially designed to hold the installation box is available as an option extra for solid wall installations.

*Trademark notice: iPad™ is a trademark of Apple Inc., registered in the U.S. and other countries.

4 KEY COMPONENTS

4.1 INSTALLATION BOX

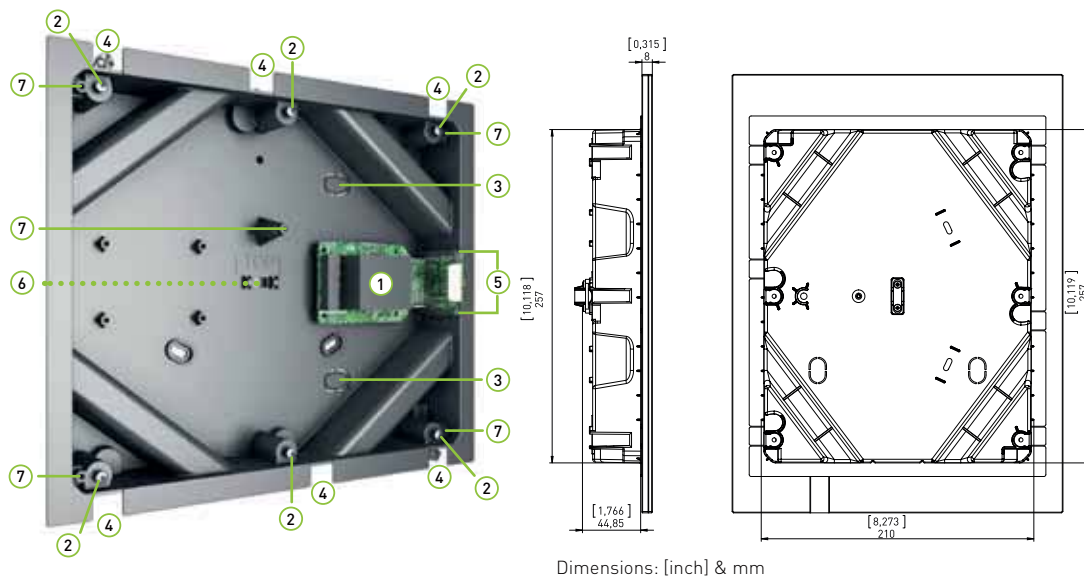

- ① Power supply board
- ② Fixing screws with cavity wall spreaders
- ③ Cable feedthrough (can be broken out)
- ④ Recesses for inserting the metal base plate

- ⑤ Connection board guide
- ⑥ Tension relief (rear)
- ⑦ Stop screw holders


SPECIAL FEATURES

- >> With guiding mechanism for inserting the flush-mounting box (movable inside)
- >> Also designed for cavity wall installations
- >> 6 metal spreaders provide secure hold in any cavity wall
- >> Cable feedthroughs and tension reliefs for all cable types
- >> Fireproof polyamide 6 (Pa 6 V0)

MAINS ADAPTER / POWER SUPPLY

- >> Multi-national use
- >> No external mains adapter necessary, making it easy to install in existing constructions
- >> Input AC: 100 V to 240 V, 0.2 A
- >> Frequency: 50 Hz / 60 Hz
- >> Output DC: 5 VDC (+)

4.2 METAL BASE PLATE

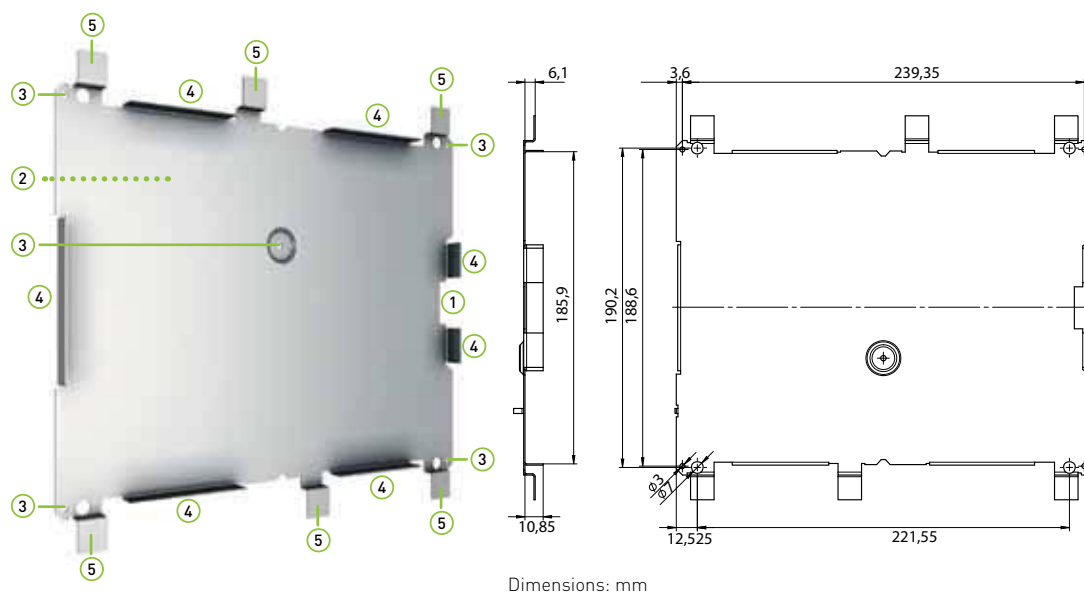

- ① Recess for inserting connection board
- ② Earth cable connection (rear)
- ③ Stop screw holders


- ④ Decorative glass frame alignment
- ⑤ Adhesive areas for magnetic holder

SPECIAL FEATURES

- >> Magnetic iPad™* holder function
- >> Stainless steel design
- >> Areas for aligning and fixing the decorative glass frame (on the sides)

*Trademark notice: iPad™ is a trademark of Apple Inc., registered in the U.S. and other countries.

4.3 DECORATIVE GLASS FRAME

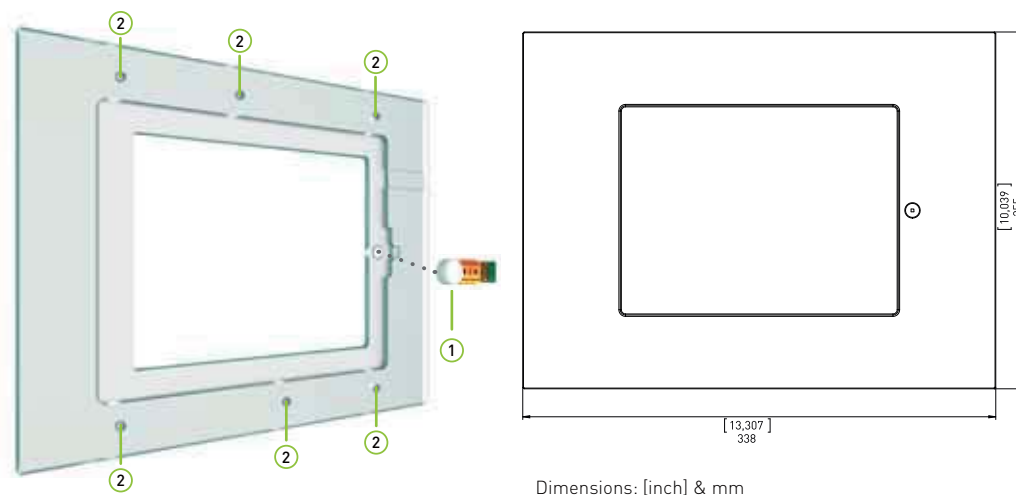


- ① Operating button
- ② Integrated magnets (rear)

SPECIAL FEATURES

- >> Unique illuminated operating button
- >> Wireless setup, easy installation
- >> Integrated magnets for fixing to metal base plate

4.4 FLUSH-MOUNTING BOX (OPTIONAL)

Not included in the scope of delivery. Can be ordered under product number: INN PAD-UP-99-99-02-00.

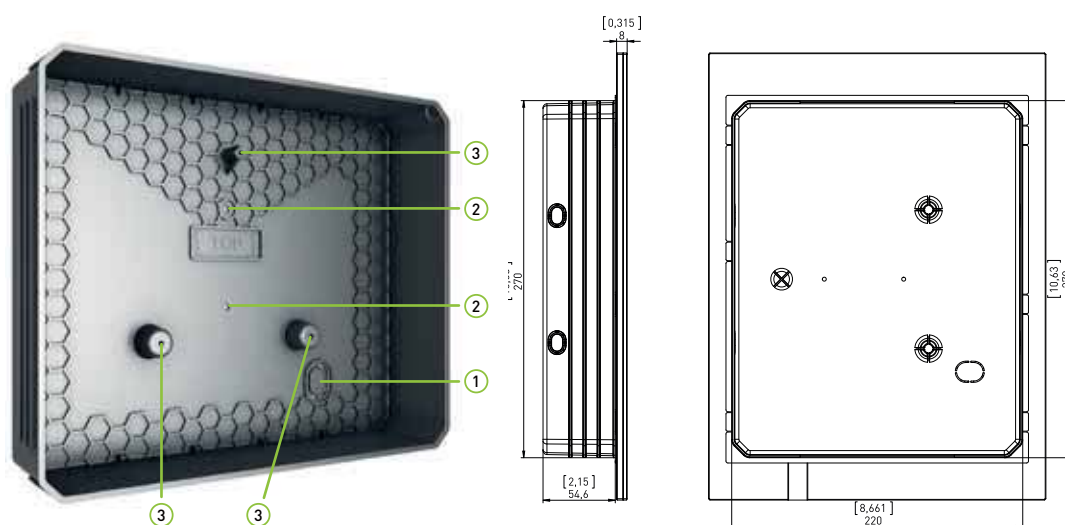

- ① Cable feedthrough (can be broken out)
- ② Fixing holes
- ③ Installation box retainer

SPECIAL FEATURES

- >> Installation box specially designed for solid wall installations
- >> Has grooved sides for secure hold when inserted in plaster
- >> The flush-mounting box has a movable inside so that the installation box can be perfectly aligned
- >> Cable feedthrough on all sides
- >> Fireproof polyamide 6 (Pa 6 V0)

5 PREPARING FOR INSTALLATION

5.1 CHOOSING THE INSTALLATION SITE

The following factors must be considered when choosing the installation site so as to ensure that the INNO^{PAD} can be easily installed and the iPad™* operated without problems:

- >> A sufficiently strong WiFi signal must be available in the area for the iPad™* to operate correctly.
- >> At the installation site, it must be possible to go 56 mm into a solid wall or 45 mm into a cavity wall. **Tip:** Use the specially designed INNO^{PAD} flush-mounting box for solid wall installations. This item is not included in the scope of delivery but can be ordered separately (product number: INN PAD-UP-99-99-02-00).
- >> The installation site should not be exposed to direct sunlight and maintain temperatures between 0 °C and 35 °C and a relative humidity between 10 % and 95 % (no condensation).
- >> A sufficient power supply (according to specifications) has to be available at the installation site.
- >> When installing the device in a solid wall, the area should be free of cables, supply pipes and supporting struts.

Please note: All electrical connections and installations must be carried out by a qualified electrician in compliance with the general rules and regulations for electrical connections.

5.2 UNPACKING THE COMPONENTS

The compact INNO^{PAD} packaging protects the individual components against damage and soiling. To optimally protect the high-quality parts with easily damaged surfaces, the outer packaging is designed so that the individual parts can be unpacked from their protective compartments one by one in the order of assembly.

Please remember to remove the transport lock (marked by the sticker on the metal base plate) before removing the components.

To avoid any damage, please handle each part with care and use the protective gloves during installation that are provided for this purpose.

*Trademark notice: iPad™ is a trademark of Apple Inc., registered in the U.S. and other countries.

6 INSTALLING THE INNO^{PAD}

6.1 SOLID WALL INSTALLATION

EN



Figure 1



Figure 2



Figure 3

6.1.1 INSTALLING THE FLUSH-MOUNTING BOX

We recommend using the INNO flush-mounting box for perfectly fitting the INNO^{PAD} into a solid wall. It is specially designed to accommodate the INNO^{PAD} installation box and guarantees that the complete INNO IN-WALL-SYSTEM SOLUTION is perfectly aligned and seated securely.

This item is not included in the scope of delivery but can be ordered separately (product number: INN PAD-UP-99-99-02-00).

1. Take the template for solid wall installations from the packaging and set it up horizontally at the installation site.
2. Fix the template to the wall with adhesive tape and trace the inner lines with a pen (Fig. 1).
3. Remove the template from the wall and **ensure that the wall is free of supply pipes, cables and metal struts at the installation site.**
4. Carefully remove the area of wall within the markings so as to insert the flush-mounting box.
5. Remove the flush-mounting box from the packaging.
6. Hold the flush-mounting box to the wall, taking care that the „TOP“ marking at the bottom of the box is facing up, and find the optimal position for feeding the power cable into the box (Fig. 2).
7. **Ensure that all live cables are disconnected from the power supply at the installation site!** Break out the corresponding cable feedthrough and feed the power cable and, if necessary, audio wire through the opening into the flush-mounting box. Take care not to damage the cables.
8. Insert the flush-mounting box perpendicularly into the wall recess, ensuring that the „TOP“ marking is facing up, and fix the box to the wall (Fig. 3).
Tip: Use the fixing holes in the bottom of the flush-mounting box for this purpose.
9. To fix the flush-mounting box in place, plaster must be applied around it so that it fits smoothly into the wall. Apply the plaster to all sides of the box so that there are no protruding parts and wipe away all excess plaster to provide a flush finish.

6.1 SOLID WALL INSTALLATION



Figure 4

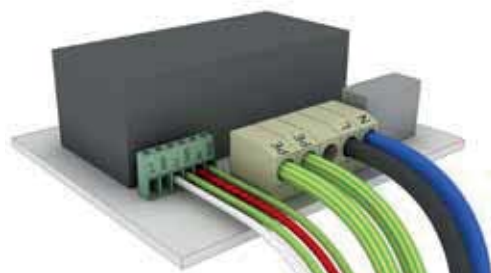


Figure 5



Figure 6



Figure 7



Figure 8

6.1.2 INSTALLING THE INSTALLATION BOX

1. Remove the transport lock then take the installation box out of its packaging.
2. Hold the installation box to the flush-mounting box, taking care that the „TOP“ marking at the bottom of the box is facing up, and break out the cable feedthrough.
3. **Ensure that all live cables are disconnected from the power supply at the installation site!** Feed the power cable and, if necessary, audio wire through the opening into the installation box. Take care not to damage the cables.
4. Secure the power cable to the rear of the installation box with the tension relief (Fig. 4).
Tip: The tension relief can be adjusted for various cable diameters by rotating the tension relief lever.
5. **All electrical installations must be carried out by a qualified electrician.** Cut the power cable to a length of 250 mm from the tension relief and attach it to the pre-assembled mains supply in compliance with the connection regulations (Fig. 5).
6. **All electrical installations must be carried out by a qualified electrician.** Fix the audio wire to the audio output on the main board to feed the audio signal out via cinch cable (NF) (Fig. 5).
7. Insert the installation box in the flush-mounting box, ensuring that the „TOP“ marking is facing up, and fix it with the bolts.
8. Adjust the installation box perpendicularly with the help of the movable inside of the flush-mounting box and fix it in position by tightening the bolts (Fig. 6).

6.1.3 INSTALLING THE METAL BASE PLATE

1. Take the metal base plate out of the packaging.
2. **Ensure that all live cables are disconnected from the power supply at the installation site! All electrical installations must be carried out by a qualified electrician.**
To earth the metal base plate, connect the earth cable to the earth connection on the rear of the metal base plate.
3. Fit the metal base plate correctly into the recesses in the installation box and fix it with the medium-sized stop screw to the corresponding holders (Fig. 7).
4. If you are using an iPad 2™*, insert the 2 spacer plates in the bottom of the metal base plate for a perfect fit underneath the decorative glass frame (Fig. 8).
5. Fix the metal base plate – including spacer plates when installing iPad 2™* – to the installation box with the remaining stop screws.

*Trademark notice: iPad™ is a trademark of Apple Inc., registered in the U.S. and other countries.



Figure 9



Figure 10

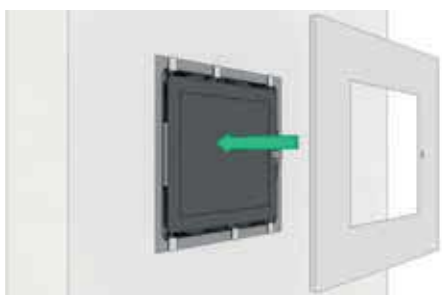


Figure 11



Figure 12

6.1.4 FIXING THE IPAD™/** TO THE METAL BASE PLATE

Please wear the protective gloves when installing the INNO^{PAD}.

1. Take the magnetic adhesive foil and the connection board from the packaging.
2. Unpeel the protective foil from the adhesive area of the magnetic adhesive foil and stick it to the rear of the iPad™* (Fig. 9). **Attention: When using the iPad 2™*, please position on the magnetic adhesive foil so that it sticks to the spacer plates on the metal base plate.**
3. Plug the connection board into the iPad™* docking connector with the circuit board facing to the rear (Fig. 9).
4. Carefully push the iPad™* into the installation box guide with the connection board circuit facing forward until it is flush and the magnetic adhesive foil on the rear of the iPad™* sticks to the metal base plate (Fig. 10).
5. Clean the iPad™* display with the INNO cleaning cloth.

6.1.5 INSTALLING THE DECORATIVE GLASS FRAME

Take care when handling the valuable decorative glass frame. Do not drop the glass frame during installation to prevent physical damage and injuries.

1. Carefully take the decorative glass frame out of the packaging. **Please wear the gloves to protect the high-quality surface during installation.**
2. Position the decorative glass frame exactly on top of the metal base plate so that the INNO logo appears in the lower part of the frame (Fig. 11).
3. Carefully place the decorative glass frame onto the metal base plate along the adjuster until the magnets on the rear of the frame stick solidly to the plate (Fig. 12).

6.1.6 TURNING ON THE DEVICE

1. Turn on the power supply.
2. The home button illuminates and the Pad™* is charged up and ready to use.
3. Turn on the iPad™* and apply the required settings.

Please refer to the manufacturers' operating manuals for details on operating the iPad™* and installed apps.

*Trademark notice: iPad™ is a trademark of Apple Inc., registered in the U.S. and other countries.

** Not included in the scope of delivery.

6.2 CAVITY WALL INSTALLATION



Figure 13

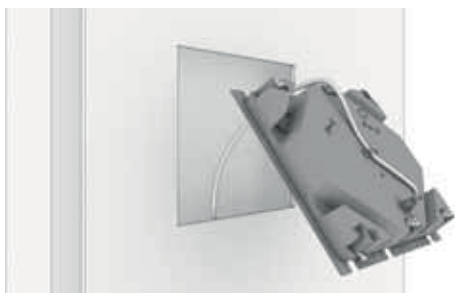


Figure 14

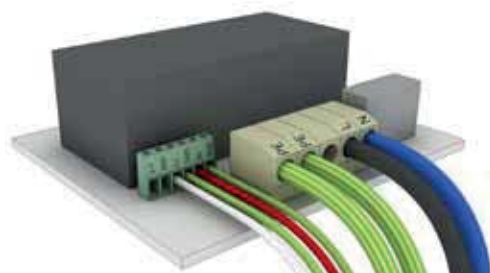


Figure 15

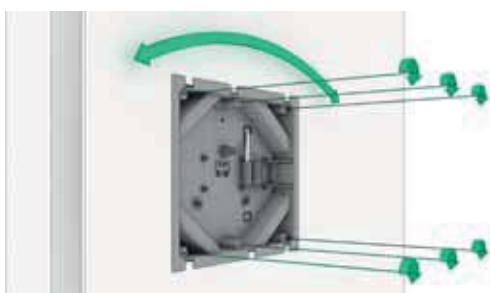


Figure 16



Figure 17

6.2.1 INSTALLING THE INSTALLATION BOX

1. Remove the template for cavity wall installations from the packaging, set it up horizontally at the installation site, and trace the inner lines with a pen (Fig. 13).
2. **Ensure that the wall is free of supply pipes, cables and metal struts at the installation site.** Carefully remove the area within the markings so as to insert the installation box.
3. Remove the transport lock then take the installation box out of its packaging.
4. Hold the installation box to the wall opening, taking care that the „TOP“ marking at the bottom of the box is facing up, and break out the cable feedthrough.
5. **Ensure that all live cables are disconnected from the power supply at the installation site!** Feed the power cable and, if necessary, audio wire through the opening into the installation box. Take care not to damage the cables.
6. Secure the power cable to the rear of the installation box with the tension relief. **Tip:** The tension relief can be adjusted for various cable diameters by rotating the tension relief lever (Fig. 14).
7. **All electrical installations must be carried out by a qualified electrician.** Cut the cable to a length of 250 mm from the tension relief and attach it to the pre-assembled mains supply in compliance with the connection regulations (Fig. 15).
8. Fix the audio wire to the audio output on the main board to feed the audio signal out via cinch cable (NF) (Fig. 15).
9. Insert the installation box in the wall opening with the „TOP“ marking facing up and fix it perpendicularly by screwing the metal spreaders until you feel a resistance (Fig. 16). The spreaders automatically move outward when screwing, tightening against the innercavity wall and thus fixing the installation box.

6.2.2 INSTALLING THE METAL BASE PLATE

1. Take the metal base plate out of the packaging.
2. **Ensure that all live cables are disconnected from the power supply at the installation site! All electrical installations must be carried out by a qualified electrician.** To earth the metal base plate, connect the earth cable to the earth connection on the rear of the metal base plate.
3. Fit the metal base plate correctly into the recesses in the installation box and fix it with the medium-sized stop screw to the corresponding holders (Fig. 17).



Figure 18



Figure 19



Figure 20



Figure 21



Figure 22

4. If you are using an iPad 2™*, insert the 2 spacer plates in the bottom of the metal base plate for a perfect fit underneath the decorative glass frame (Fig. 18).
5. Fix the metal base plate – including spacer plates when installing iPad 2™* – to the installation box with the remaining stop screws.

6.2.3 FIXING THE IPAD™**/** TO THE METAL BASE PLATE

Please wear the protective gloves when installing the INNO^{PAD}.

1. Take the magnetic adhesive foil and the connection board from the packaging.
2. Unpeel the protective foil from the adhesive area of the magnetic adhesive foil and stick it to the rear of the iPad™* (Fig. 19). **Attention: When using the iPad 2™*, please position the magnetic adhesive foil so that it sticks to the spacer plates on the metal base plate.**
3. Plug the connection board into the iPad™* docking connector with the circuit board facing to the rear (Fig. 19).
4. Carefully push the iPad™* into the installation box guide with the connection board circuit facing forward until it is flush and the magnetic adhesive foil on the rear of the iPad™* sticks to the metal base plate (Fig. 20).
5. Clean the iPad™* display with the INNO cleaning cloth.

6.2.4 INSTALLING THE DECORATIVE GLASS FRAME

Take care when handling the valuable decorative glass frame. Do not drop the glass frame during installation to prevent physical damage and injuries.

1. Carefully take the decorative glass frame out of the packaging. **Please wear the gloves to protect the high-quality surface during installation.**
2. Position the decorative glass frame exactly on top of the metal base plate so that the INNO logo appears in the lower part of the frame (Fig. 21).
3. Carefully place the decorative glass frame onto the metal base plate along the adjuster until the magnets on the rear of the frame stick solidly to the plate (Fig. 22).

6.2.5 TURNING ON THE DEVICE

1. Turn on the power supply.
2. The home button illuminates and the iPad™* is charged up and ready to use.
3. Turn on the iPad™* and apply the required settings.

Please refer to the manufacturers' operating manuals for details on operating the iPad™* and installed apps.

*Trademark notice: iPad™ is a trademark of Apple Inc., registered in the U.S. and other countries.

** Not included in the scope of delivery.

7 WARRANTY

WARRANTY

The device comes with a two-year warranty as from the date of purchase. Exception: The INNO^{PAD} has already been repaired or replaced under warranty. In this case, the warranty applies until the end of the original warranty period or six months as from the date of repair or replacement.

REPORTING / VALIDATING A FAULT

If you find your INNO^{PAD} to be faulty, please report it to your dealer and provide the original sales receipt and serial number as well as a description of the fault. The manufacturer or its authorised customer service provider checks all functions and determines if the fault is due to material or manufacturing defects covered by warranty and therefore qualifies for your INNO^{PAD} to be repaired or replaced.

EXCLUSION OF WARRANTY

The following defects are not covered by warranty. Defects caused by:

- >> Misuse and non-compliance with the operating instructions;
- >> Incorrect operation;
- >> Changing the INNO^{PAD} so that it no longer corresponds to the features described in the operating instructions;
- >> Attempting repairs or repairs carried out by an unauthorised person;
- >> Using the INNO^{PAD} in connection with third-party products;
- >> Deleting, removing, changing or rendering unreadable the manufacturing number of the device;
- >> Connecting the device to an unsuitable power supply;
- >> Force majeure.

LIMITED WARRANTY

INNO International GmbH shall be held liable to the full extent of the above-stated warranty. INNO International GmbH therefore shall not be held liable for any additional warranty claims for loss or damages (except those caused by acts of gross negligence) resulting from the acquisition, possession, sale or use of the INNO^{PAD}.

INNO International GmbH shall not be held liable under any circumstance for subsequent damages, delays, insufficient information or advice and breach of copyrights. This does not affect any customer rights relating to material faults.

VARIOUS PROVISIONS

No person, including all sales partners, dealers, agents and representatives, shall be entitled to assume any warranty or amend the warranty provisions in the name of INNO International GmbH. Buyers must determine for themselves if the INNO^{PAD} is suitable for their intended purposes.

Our **hotline** will be pleased to answer any of your questions on **+49 (0) 180 501 501 3** (14 cent/min. from German landlines, max. 42 cent/min. from mobile networks. Additional costs may be incurred when phoning from foreign networks, depending on the fees of the network provider.).



INNO International GmbH
Heinrich-Hertz-Straße 12
59423 Unna / Germany
Phone +49 (0) 2303 333-333
www.inno-international.com